


Bee-eye butterfly lamp use manual

4. Remote control operation instructions

Note: Before using the remote control, please pull out the plastic piece under the remote control so that the remote control can work.

ON	Since go	
OFF	close	
DMX	DMX pattern	
AUTO	Since walk, every press since walk function switch	
speed+	Speed increase	
speed-	Speed slowed down	
voice	Voice control, each press the voice control switch	
mic+	Increased voice-control sensitivity	
mic-	Voice-control sensitivity decreases	
1	Combination from go	
2	red LED	
3	green LED	
4	blue LED	
5	white LED	
6	LED from the walk	
7	strobeflash	
8	purple light LED	
9	Laser from walk	
0	sound control	

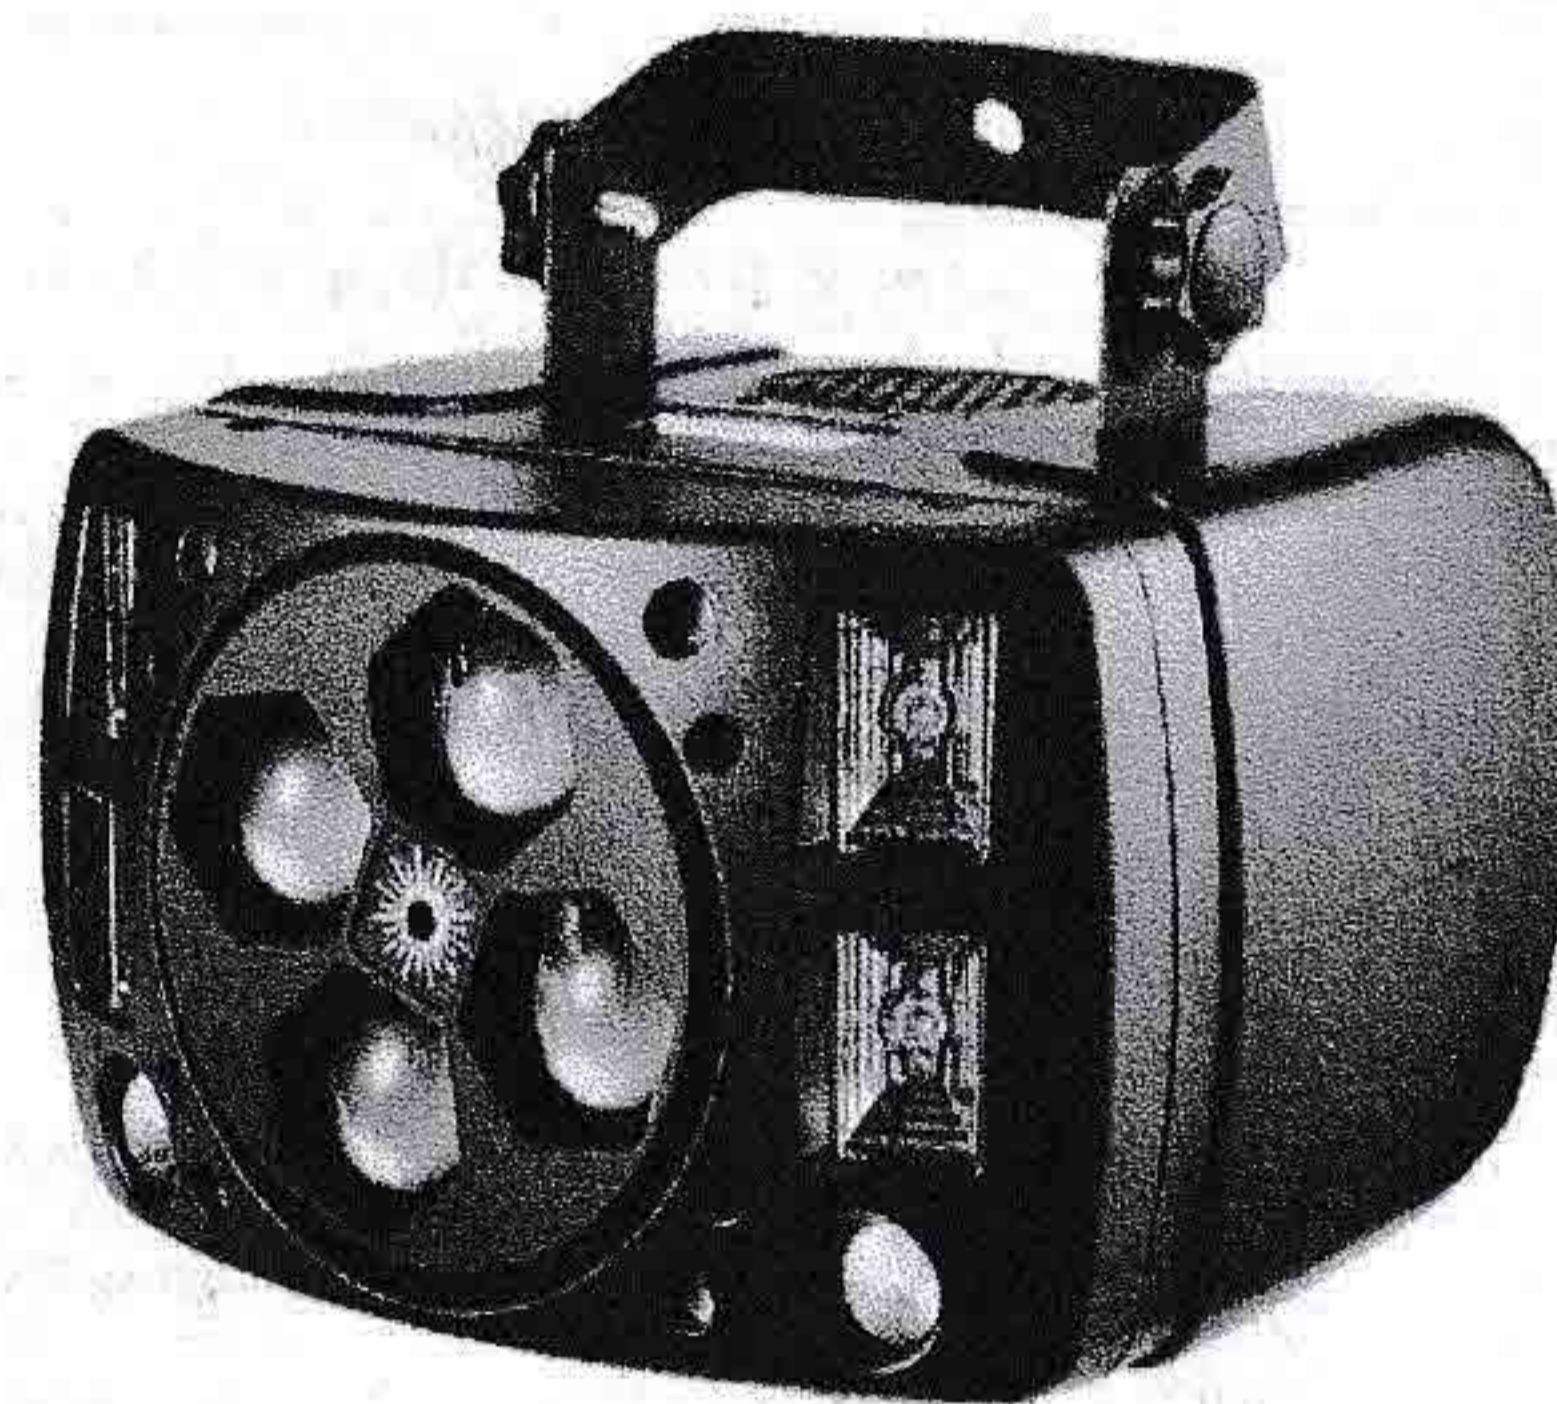

Thank you for purchasing our products Read this manual carefully before operating the lamp

1. Product technical parameters

- The operating voltage: AC95V-245V 50 / 60Hz
- Rated power: 50W
- Light bead parameters: 4pcs15W 4-in-1, 2pcs10W white light strobe, 4pcs3W purple light, 2pcs100 mW red laser and 2pcs50 mW green laser
- control mode: international general DMX512, 12 channels
- Working mode: DMX512, main / slave, self-walking, voice control
- Dimming: 0~100% super smooth dimming
- strobe: 20 times / second

2. Function Settings

menu	numeric value	description	
id	001~512	Console mode or the slave mode	
A1~2	1~9	Integrated mode, the larger the value, the faster the motor speed	
E1~7	1~9	In the LED mode, the larger the value, the faster the motor speed	
F1	1~9	In strobe mode, the larger the value, the faster the strobe speed	
P1	1~9	Uniguang mode, the larger the value, the higher the brightness	
L 1~2	1~9	4. Laser mode, the larger the value, the faster the speed	
SOU_	1~2	Voice-controlled mode, 2-mode selection	
VOL_	1~9	Voice control sensitivity adjustment, the larger the value, the higher the sensitivity	Press the "ENTER" key for five seconds to enter the secondary menu
ir_	ON/OFF	Remote control / turn off	
The "MENU" menu key, "ENTER" storage confirmed health "UP" and "DOWN" motor speed adjustment and DMX512 address adjustment, Voice control sensitivity adjustment and remote control switch switch under the secondary menu.			

3. DMX control

channel	The channel value	functional description
---------	-------------------	------------------------

CH 1	0~127	LED motor placement,
	128~191	LED motor reverse rotation, speed from fast to slow
	192~255	The LED motor rotates forward, from slow to fast
CH 2	0	Closed light
	1~255	Total dimming
CH 3	0	No flash
	1~255	Strobe speeds range from slow to fast
CH 4	0	Red LED with closed light
	1~255	Red LED brightness is adjusted linearly from dark to bright
CH 5	0	Green LED with closed light
	1~255	The green LED brightness is linearly adjusted from dark to bright
CH 6	0	Blue LED-closed light
	1~255	The blue LED brightness is linearly adjusted from dark to bright
CH 7	0	White LED closed light
	1~255	The white LED brightness is linearly adjusted from dark to bright
CH 8	0	Flash closed light
	1~255	Strobe speeds range from slow to fast
CH 9	0	Purple LED with closed light
	1~255	Purple LED brightness is linearly regulated from dark to bright
CH 10	0	Laser closed light
	1~255	The laser brightness is linearly adjusted from dark to bright
CH 11	0~55	CH1~CH10 valid
	56~95	Monochromatic jump
	96~135	Mixed color jump 1
	136~175	Mixed color jump 2
	176~215	Sound control 1
	216~255	Sound control 2
CH 12	0~255	Speed is slow to fast (sensitivity from slow to fast). CH 11 is effective